

## MOUSQUETON PORTABLE LAMP

- СЕИЕВАГ ІИГОЯМАТІОИ -

read all instructions before installing the lamp. lamp is not plugged into a power source. Please Before removing the battery, make sure that the

found to comply with the limits for a Class NOTE | This equipment has been tested and

of the following measures: to try to correct the interference by one or more the equipment off and on, the user is encouraged reception, which can be determined by turning cause harmful interference to radio or television particular installation. If this equipment does guarantee that interference will not occur in a to radio communications. However, there is no instructions, may cause harmful interference installed and used in accordance with the radiate radio frequency energy and, if not This equipment generates, uses and can interference in a residential installation. provide reasonable protection against harmful FCC Rules. These limits are designed to B digital device, pursuant to part 15 of the

- Increase the distance between the · Reorient or relocate the receiving antenna.
- Connect the equipment to an outlet on a equipment and receiver.
- connected to. different circuit to the one the receiver is
- radio/TV technician for help. Consult the dealer or an experienced

operate the equipment. This device complies with for compliance could void the user's authority to not expressly approved by the party responsible CAUTION | Changes or modifications to this unit

received, including interference that may This device must accept any interference

the following two conditions: part 15 of the FCC Rules. Operation is subject to

This device may not cause harmful

lithiumion battery. When charging the battery,

cause undesired operation.

it with the supplied USB cable. The battery in this battery life, it is recommended to regularly charge maintain a capacity of 75% or more. To extend EN 61347-2-13. After 300 charging cycles, it will current not more than 2A, according to IEC/ (SELV) output with a constant voltage of 5V, input use a USB power source/driver with low voltage

interference.

況 🖉 Э) 

been turned OFF before cleaning the product. rough sponges. Ensure that the power supply has to clean the product and avoid using abrasive or cloth. Do not use alcohol or any other solvents cloth and mild detergent, or a dry microfibre The product can be cleaned with a soft damp

CARE AND MAINTENANCE

- · Do not submerge.
- Suitable for damp and wet locations.
- .WOOTLS '0 ,WOTLS ,WTLS ,WOOLS ,WOLS STOW, STOOW, SJEW, SJEOW, SJEOOW, SJW, type SEW, SEOW, SEOOW, SOW, SOW, STW,
- use, such as an extension cord of cord
- Use only with an extension cord for outdoor
- .vjetes and are able to be used for this measure of available having built-in GFCI protection
- portable luminaire. Receptacles are
- or outlet(s) to be used for the wet location protection is to be provided on the circuit(s)
  - Ground Fault Circuit Interrupter (GFCI)
- .gulq s'sonsilqds and grounding receptacles that accept the
- that have three-prong grounding plugs · Use only three-wire outdoor extension cords

shock and personal injury, including the following: be followed to reduce the risk of fire, electric luminaires, basic safety precautions should always WARNING | When using outdoor use portable

- CARE & MAINTENANCE -

Our Care & Maintenance offers guidance for optimal maintenance of your HAY product. It includes advice and instructions on cleaning and caring for specific materials to prolong the life of your lighting.



Please find our Care & Maintenance guide by scanning the QR code





TECHNICAL DATA

ΝΟΙΤΝΕΤΤΑ

The expected lifespan of the LED module is module (2800K warm white, 110 lumens) This product is supplied with an integrated LED

whole luminaire should be replaced. When the light source reaches its end of life, the 50,000 hours.

POWER (W) 3.7 W FITTING TYPE | Integrated LED

 Max. charging current: 2000mA. V8.5 : Max. charge voltage of battery: 5.8V

Max. discharge current: 700mA.

before the lamp is disposed of.

removed from the lamp and disposed of safely

lamp is non-replaceable. The battery must be

This lamp has an integrated high-performance

indoor and outdoor use. HAY recommends that

replaced immediately. This lamp is designed for

order to avoid an electrical hazard. If the external

exclusively replaced by a qualified electrician in

that have been modified or tampered with. The HAY accepts no responsibility for any products

The product must not be modified in any way.

light source contained in this luminaire should be


USB charging cable is damaged it should be

the lamp is not kept outside while raining.

COLOUR TEMPERATURE | 2800K. Warm White.

You can find more relevant information on Mousqueton Portable Lamp by scanning the QR code

You can also find the same information here hay.dk/downloads

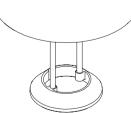

Havnen 1 8700 Horsens Denmark +45 3164 6000 / hay@hay.com

www.hay.com

DESIGN BY INGA SEMPÉ

HAY




HAY

To charge the battery, insert the USB charger into the USB port on the bottom of the lampshade and connect the cable to a power supply. When the battery is charging, the light on the bottom will show red. When the battery is fully charged, the light will show green. The lamp can be used while charging, however this will extend the required charging time for full capacity.

2.

To turn the lamp on, touch the round button on the bottom of the lampshade. The lamp has a three-step dimmable feature. First push sets it to maximum brightness, second push to medium brightness and the third push to lowest brightness. Fourth push turns the lamp off.

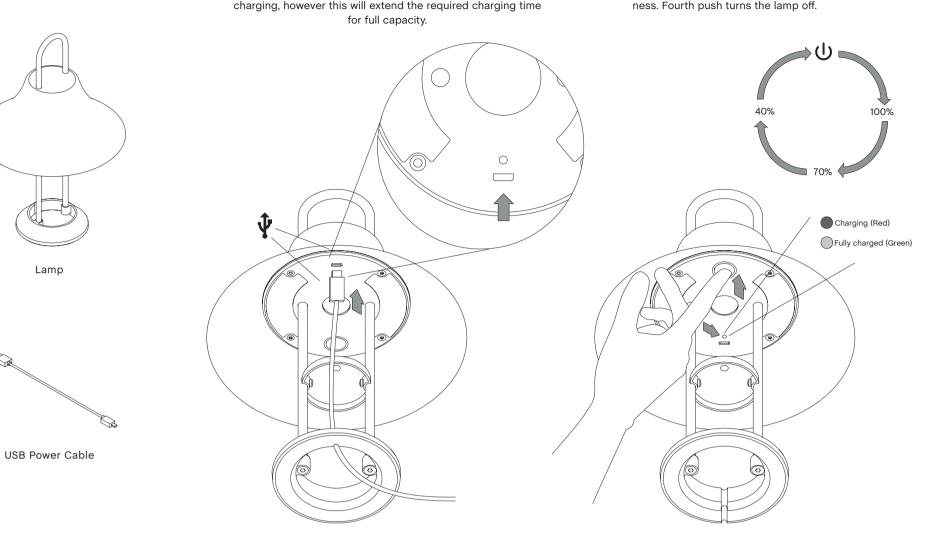

З.

Suggestions for use

The carabiner can be used to hang the lamp, to create a cosy

atmosphere in your garden, as shown below.

Suggestions for use

The Mousqueton Portable Lamp can also be balanced

on a stick as shown below..

The carabiner handle can be opened and closed by lifting the carabiner up and twisting it gently 180 degrees.

